
Garage Door Opener , (VC1),(VC2) From January 2011




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



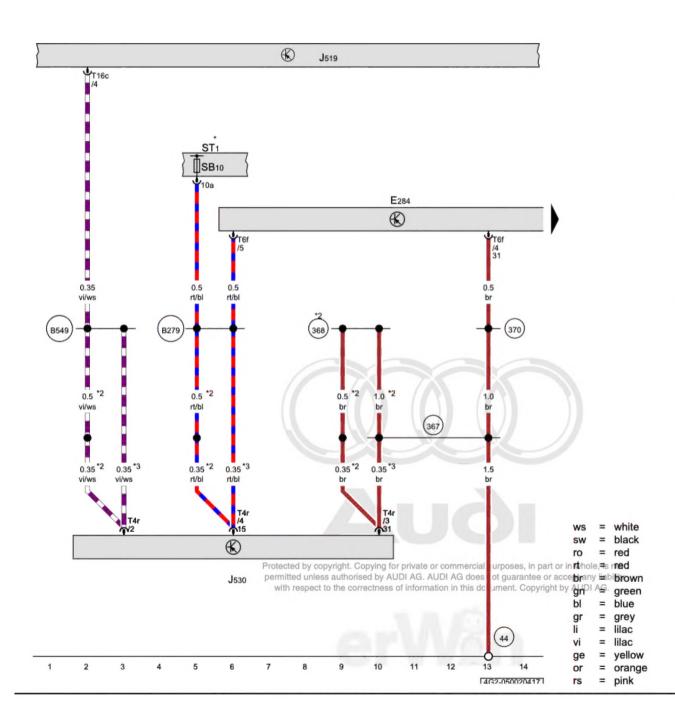

Garage Door Opener Control Head, Garage Door Opener Control Module

Control Module	
T4r	Vehicle Electrical System Control Module Garage Door Opener Control Module Fuse Panel 1 Fuse 10 (On Fuse Panel B) 4-Pin Connector
T6f	6-Pin Connector
T16c	16-Pin Connector
44	Ground Connection on A-Pillar, Lower Left
367	Ground Connection 2 (in Main Wiring Harness)
368	Ground Connection 3 (in Main Wiring Harness)
370	Ground Connection 5 (in Main Wiring Harness)
B279	Positive Connection 3 (15a) (in Main Wiring Harness)
B549	Lin Bus Connection 2 (in Main Wiring Harness)
*	Refer to Applicable Wiring Diagram for Fuse Positions
*2	Omitted as a Running Change
*3	Running Change

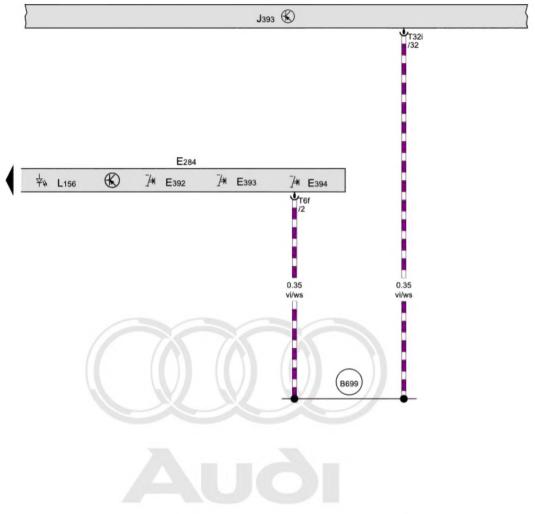

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

15 16 17 18 19 20 21 22 23 24 25 26 27 28

sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

= white

Garage Door Opener Control Head, Garage Door Opener Button 1

E284 Garage Door Opener Control Head E392 Garage Door Opener Button 1 E393 Garage Door Opener Button 2 E394 Garage Door Opener Button 3

J393 Comfort System Central Control Module

L156 Switch Illumination Bulb

T6f 6-Pin Connector T32i 32-Pin Connector

(B699) Lin Bus Connection 4 (in Main Wiring Harness)